
GENERAL INSTRUMENT

SP0250 APPLICATIONS MANUAL

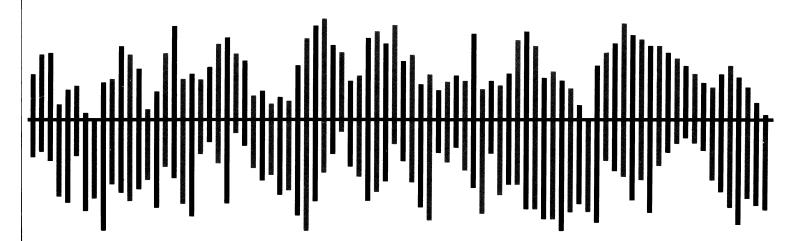

Microelectronics DivisionGeneral Instrument Corporation

GENERAL INSTRUMENT

SP0250 APPLICATIONS MANUAL



Microelectronics DivisionGeneral Instrument Corporation

TABLE OF CONTENTS—PAGE 2

JUNE 1982

© Copyright June 1982 GENEHAL INSTHUMENT COHPOHATION All information in this book is subject to change without notice. The information in this publication, including schematics, is suggestive only, General Instrument Corporation makes no warranty express or implied, nor will it be responsible or liable for, (a) the accuracy of such information, (b) its use or (c) any infringement of patents or other rights of third parties.

SP0250 Applications Manual

Table of Contents

| 1. | Boothpalon in | 3 |
|-----|---|---|
| 2. | Features | 3 |
| 3. | Theory | 4 |
| 4. | Pin Configuration | 5 |
| 5. | Pin Functions | 5 |
| 6. | Test Pins | 6 |
| 7. | Timing Diagram | 6 |
| 8. | Architecture | 7 |
| 9. | FIFO | 8 |
| 10. | Digital Filter | 9 |
| 11. | Filter Coefficients 1 | 1 |
| 12. | DAC Output | 2 |
| 13. | Electrical Characteristics | 2 |
| 14. | Speech Code Generation | 3 |
| | • Application 1 | 3 |
| | • Description 1 | 3 |
| | • Operation 1 | 3 |
| 15. | PIC Microcomputer Functions | 5 |
| 16. | Example 1 | 6 |
| 17. | Speech Data 1 | 8 |
| 18. | Listing 2 | 0 |
| | - | |

LIST OF ILLUSTRATIONS

| Fig. 1 | Speech System Block Diagram | 3 |
|---------|-----------------------------|-----|
| Fig. 2 | Speech Synthesis Model | |
| Fig. 3 | Block Diagram of SP0250 | 7 |
| Fig. 4 | Data Block Format of Speech | 4 |
| Fig. 5 | Single Cascade Stage | 10 |
| Fig. 6 | Six Cascade Stages | 1 C |
| Fig. 7 | VSM2032 Speech Module | 14 |
| Fig. 8 | Speech Frame Format | 16 |
| Fig. 9 | ROM Format | 17 |
| Fig. 10 | Flowchart | 19 |

DESCRIPTION

The SP0250 speech synthesizer is an N-channel MOS LSI device capable of generating high quality speech with the natural inflection and emphasis of the original speaker. Operation requires one or more ROMs to store speech data and a microcomputer/processor such as General Instrument's PIC1650A (Figure 1).


The microcomputer retrieves a data block from the ROM, formats it into a 15×8 bit speech data frame and transfers it to the SP0250

8-bit port using two handshaking signals. This speech data frame, which includes such information as pitch period, amplitude, voiced/unvoiced, number of repetitions and filter coefficients "programs" the synthesizer to produce one frame of speech output.

The achievable output has a frequency response of .1-5KHz, a dynamic range of 42dB and a signal to noise ratio of approximately 35 dB.

FEATURES:

- High quality speech synthesizer
- Single +5 volt supply
- Simple interface to a microcomputer or microprocessor based system
- TTL compatible 8 bit bus interface
- Handshaking
- Double Buffered Input

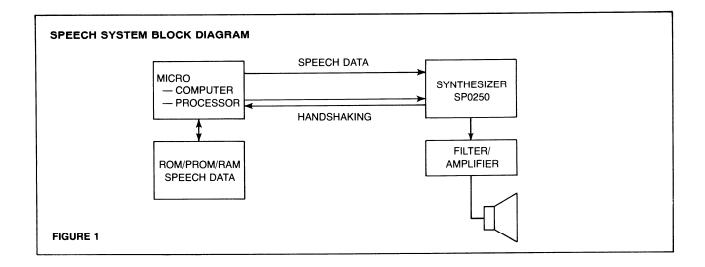

THEORY


Human speech is characterized as either voiced or unvoiced. When the vocal cords vibrate and the passage of air is not constricted, a "vowel like" sound is produced (voiced). Voiced sounds like *I*, *m* or ee have a pitch which is determined by the rate at which the vocal cords vibrate. Unvoiced sounds like *s*, *f* and *sh* have no definite pitch and are produced when air passes through constrictions formed by the teeth, tongue or lips.


The SP0250 is a digital model of this process and is illustrated in Figure 2.

The voiced/unvoiced parameter selects either the impulse generator

or the random noise generator as the excitation source. The source signal is multiplied by the gain to achieve the correct amplitude and input to the digital filter. The output of the digital filter — which is "programmed" by 12 coefficients to model the human vocal tract — is fed to a pulse width modulator which produces the audio signal.

The coefficients are generated by a speech analysis program incorporating a technique known as Linear Predictive Coding (LPC). LPC is a mathematical technique for generating points of a waveform from a weighted linear combination of previous samples. This form of mathematical comparison, relating the current output to a series of previous outputs, models the characteristic properties of the human speech mechanism.

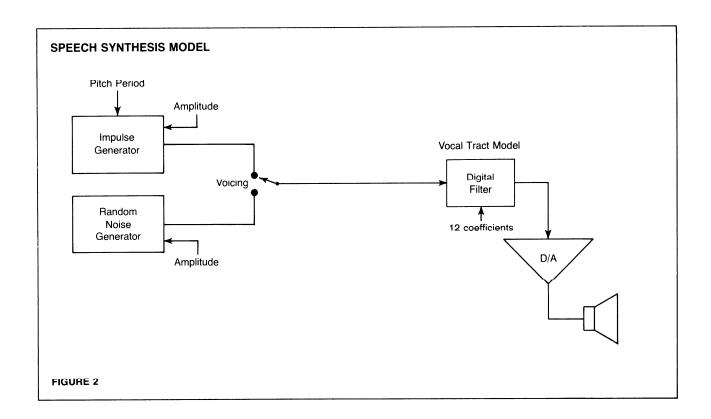

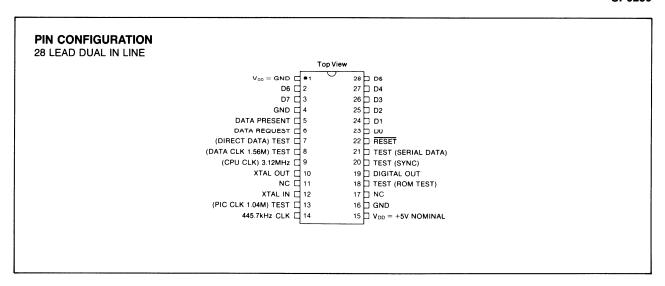


PIN FUNCTIONS

| PIN NUMBER | NAME | FUNCTION |
|-----------------------------|---|--|
| 15 1 | V _{DD} V _{SS} | Positive power supply Ground |
| Clock 12 10 Inputs | XTAL IN XTAL OUT | 3.12 MHz crystal and associated circuitry. |
| 22 | Reset | Two high to low transitions; required to reset the chip. |
| 23-28, 2, 3 | D ₀ -D ₇ Data Bus | 8 bit data bus; used by the microcomputer to transfer speech data to the SP0250. |
| 5 | Data Present | The negative edge of the Data Present pulse clocks 8 bits of speech data into the SP0250. Must be low while SP0250 is reset. |
| 4, 16, 7, 18 | | Must be grounded for proper chip operation. |
| Outputs 6 | Data Request | The SP0250 drives the Data Request pin high when it is ready to input speech data. |
| 19 | Digital Out | Chip output. This output is open collector and requires a pull-up. |
| 9 | 3.120MHz CPU Clock | Buffered push-pull output. |
| 14 | 4.5KHz Clock | Buffered push-pull output with a 3:4 high to low ratio. |

TEST PINS


| PIN NUMBER | NAME | FUNCTION |
|--------------------|--------------------|--|
| Test Inputs 7 | Direct Data Mode | A logic 1 on this input causes the data bus to be loaded directly into the source register in the chip on negative edge of Data Present pulse. |
| 18 | ROM Test | A logic 1 on this input causes the contents of the coefficient ROM to appear on the SERIAL DATA pin, Clock rate 1.56 MHz. |
| Test Outputs 20 | SYNC | Buffered push-pull test output; 640ns positive pulse with a duty cycle of 312 clocks. |
| 21 | Serial Data | Buffered push-pull test output; monitors a point in the internal data bus. |
| 8 | 1.56MHz Data Clock | Buffered push-pull square wave output. |
| 13 | 1.04MHz PIC Clock | Buffered push-pull output with 1:2 high to low ratio. |

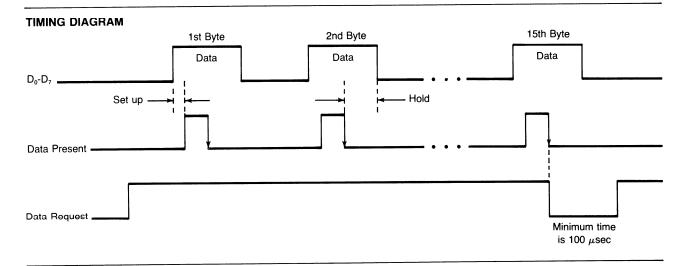

Data Request and Data Present are the handshaking signals used by the SP0250 and the microcomputer to transfer speech data. The SP0250 drives the Data Request line high when it is ready to accept a 15 x 8 bit speech frame (Data Request stays high until the entire frame has been input). When the microcomputer sees a logic 1 on

Data Request, it will begin to send speech data. The microcomputer outputs 8 bits to the SP0250 followed by a Data Present pulse. This procedure is repeated until the entire 15 byte frame has been transferred.

ARCHITECTURE

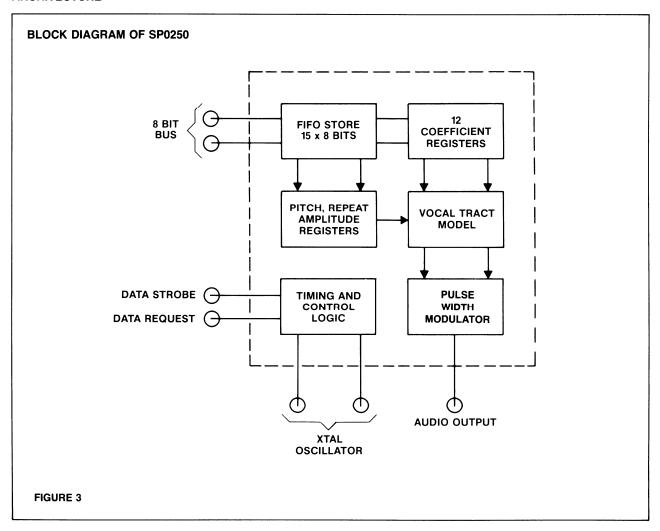

The SP0250 is controlled by 15 programmable eight bit parameter registers which hold the following information: voiced/unvoiced, pitch period, repeat count, amplitude and 12 digital filter coefficients (Figure 3).


Bit six of the repeat register is used to select either voiced or unvoiced source operation. If voiced mode is selected, the pitch

period register determines the spacing between the scaled unit impulses applied to the digital filter. The repeat register indicates the number of full pitch periods which will be synthesized before the 15 parameter registers are updated. The amplitude register in both voiced and unvoiced mode controls the gain of the source.

FIFO

The parameter registers are loaded through an 8 bit port into a 15 x 8 bit (one frame speech data, Figure 4) FIFO store. The FIFO gives the

microcomputer the ability to load the next set of parameters while the present set is controlling the synthesizer.

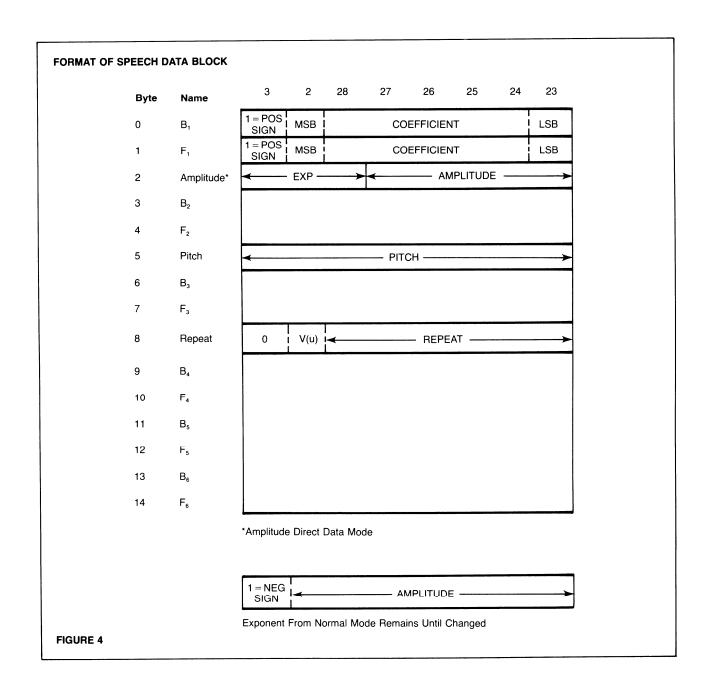

DIGITAL FILTER

The filter section is implemented using totally digital techniques. This approach allows one 2nd order section to serve as six sections through the use of multiplexing. The section that is implemented is the 2nd order infinite impulse response (IIR) digital filter shown in Figure 5. This filter stage has the transfer function:

$$H(Z) = \frac{1}{1 - 2F_tZ^{-1} - B_tZ^{-2}}$$

Therefore, it can be shown that the poles of the transfer function occur at:

$$\frac{-2F_{t}\pm\sqrt{4F_{t}^{2}+4B_{t}}}{-2}$$

and when,

$$-1 < B_t \le 0$$

and,

$$|F_t| \leq \sqrt{-B}$$

the poles will be placed in a complex pair, forming a resonator with the bandwidth given by:

(1)
$$B.W. = \frac{-Fs LN (B^2)}{\pi}$$

where Fs is the sampling frequency in HZ and the center frequency (Fk) given by:

(2)
$$Fk = Fs COS^{-1} \frac{2F_t}{\sqrt{-B_t}}$$

$$2\pi$$

As can be seen from equations (1) and (2), modification of the B coefficient changes both the frequency and bandwidth of the resonator

Modification of the F coefficient changes only the center frequency, and has no effect on the corresponding bandwidth.

Since speech signals (in particular vowel sounds) convey information through the shifting of resonant peaks in the spectrum, it is desirable to be able to change center frequencies of the 2nd order stages independent of their respective bandwidth settings. In addition it is important that the parameters of the individual stages (corresponding to particular resonances) can be independently modified. The use of cascade 2nd order stages supports these features, giving this configuration a distinct advantage over other filter sections currently in use for speech synthesis, such as the Lattice section, and direct form implementation.

If it is desired to place resonances at a frequency of zero, these real axis poles can be accommodated directly. Each 2nd order stage may be used to place two real axis poles of variable bandwidth. If X_1 is the real axis location of the first pole, and X_2 the second:

$$F_t = \frac{X_1 + X_2}{2}$$

and:


$$B_t = (F - X_1)^2 - F^2$$


with the band widths of each given by:

$$BW_1 = -2Fs LN X_1$$

$$BW_2 = -2Fs LN X_2$$

where Ft and Bt represent the coefficients in Figure 6.

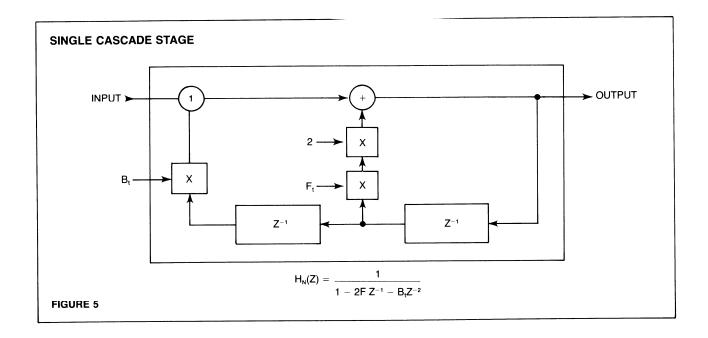

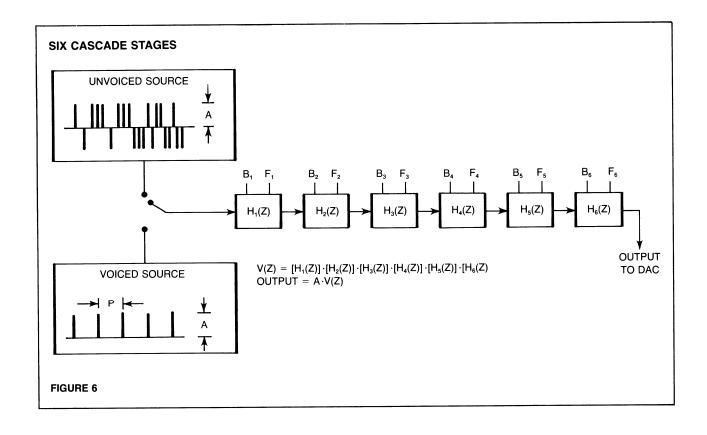

.998047

FILTER COEFFICIENTS

The coefficients F_t and B_t are non-linearly quantized by a table lookup ROM (internal to SP0250). The low order 7 bits of each filter coefficient addresses a 128 x 9 bit ROM which produces an unsigned 9 bit coefficient with a value between zero and one. The MSB of the original coefficient is the sign bit where 1 is positive and 0 is negative. The ROM contents are listed below:

| | elent is the sign bit where 1 contents are listed below: | is positive and 0 is | 62 63 | |
|-------------|--|----------------------|----------------|--|
| 7 bit | ROM | actual | 64 65 66 | |
| coefficient | contents | value | 67 68 | |
| 0 | 0 | 0.000000 | 69 | |
| 1 | 9 | .017578 | 70 | |
| 2 | 17 | .033203 | 71 | |
| 3 | 25 | .048828 | 72 | |
| 4 | 33 | .064453 | 73 74 | |
| 5 | 41 | .080078 | 74 75 | |
| 6 | 49 | .095703 | 75 76 | |
| 7 | 57 65 | .111328 | 76 77 | |
| 8 | 65 70 | .126953 | 77 78 | |
| 9 | 73 81 | .142578 .158203 | 79 | |
| 10 11 | 89 | .173828 | 80 | |
| 12 | 97 | .189453 | 81 | |
| 13 | 105 | .205078 | 82 | |
| 14 | 113 | .220703 | 83 | |
| 15 | 121 | .236328 | 84 | |
| 16 | 129 | .251953 | 85 | |
| 17 | 137 | .267578 | 86 | |
| 18 | 145 | .283203 | 87 | |
| 19 | 153 | .298828 | 88 | |
| 20 | 161 | .314453 | 89 | |
| 21 | 169 | .330078 | 90 | |
| 22 | 177 | .345703 | 91 | |
| 23 | 185 | .361328 | 92 93 | |
| 24 | 193 | .376953 | 94 | |
| 25 | 201 | .392578 | 95 | |
| 26 | 209 | .408203 | 96 | |
| 27 28 | 217 225 | .423828 | 97 | |
| 26 29 | 233 | .455078 | 98 | |
| 30 | 241 | .470703 | 99 | |
| 31 | 249 | .486328 | 100 | |
| 32 | 257 | .501953 | 101 | |
| 33 | 265 | .517578 | 102 | |
| 34 | 273 | .533203 | 103 | |
| 35 | 281 | .548828 | 104 | |
| 36 | 289 | .564453 | 105 | |
| 37 | 297 | .580078 | 106 | |
| 38 | 301 | .587891 | 107 | |
| 39 | 305 | .595703 | 108 109 | |
| 40 | 309 | .603516 | 110 | |
| 41 | 313 | .611328 .619141 | 111 | |
| 42 | 317 321 | .626953 | 112 | |
| 43 44 | 325 | .634766 | 113 | |
| 44 45 | 329 | .642578 | 114 | |
| 46 46 | 333 | .650391 | 115 | |
| 47 | 337 | .658203 | 116 | |
| 48 | 341 | .666016 | 117 | |
| 49 | 345 | .673828 | 118 | |
| 50 | 349 | .681641 | 119 | |
| 51 | 353 | .689453 | 120 | |
| 52 | 357 | .697266 | 121 | |
| 53 | 361 | .705078 | 122 | |
| 54 | 365 | .712891 | 123 | |
| 55 | 369 | .720703 | 124 | |
| 56 57 | 373 | .728516 | 125 126 | |
| 57 59 | 377 381 | .736328 .744141 | 127 | |
| 58 | 301 | ./44141 | | |

| 7 bit coefficient | ROM contents | actual value |
|----------------------|--------------|--------------------|
| 59 | 385 | .751953 |
| 60 | 389 | .759766 |
| 61 | 393 | .767578 |
| 62 63 | 397 401 | .775391 .783203 |
| 64 | 405 | .791016 |
| 65 | 409 | .798828 |
| 66 | 413 | .806641 |
| 67 | 417 | .814453 |
| 68 69 | 421 425 | .822266 .830078 |
| 70 | 427 | .833984 |
| 71 | 429 | .837891 |
| 72 | 431 | .841797 |
| 73 74 | 433 435 | .845703 .849609 |
| 7 4 75 | 437 | .853516 |
| 76 | 439 | .857422 |
| 77 | 441 | .861328 |
| 78 70 | 443 445 | .865234 .869141 |
| 79 80 | 445 447 | .873047 |
| 81 | 449 | .876953 |
| 82 | 451 | .880859 |
| 83 | 453 455 | .884766 .888672 |
| 84 85 | 455 457 | .892578 |
| 86 | 459 | .896484 |
| 87 | 461 | .900391 |
| 88 | 463 | .904297 |
| 89 90 | 465 467 | .908203 .912109 |
| 90 91 | 469 | .916016 |
| 92 | 471 | .919922 |
| 93 | 473 | .923828 |
| 94 95 | 475 477 | .927734 .931641 |
| 95 96 | 477 479 | .935547 |
| 97 | 481 | .939453 |
| 98 | 482 | .941406 |
| 99 | 483 | .943359 .945313 |
| 100 101 | 484 485 | .947266 |
| 102 | 486 | .949219 |
| 103 | 487 | .951172 |
| 104 | 488 | .953125 .955078 |
| 105 106 | 489 490 | .957031 |
| 107 | 491 | .958984 |
| 108 | 492 | .960938 |
| 109 | 493 | .962891 |
| 110 111 | 494 495 | .964844 .966797 |
| 112 | 496 | .968750 |
| 113 | 497 | .970703 |
| 114 | 498 | .972656 |
| 115 | 499 500 | .974609 .976563 |
| 116 117 | 500 501 | .978516 |
| 118 | 502 | .980469 |
| 119 | 503 | .982422 |
| 120 | 504 505 | .984375 .986328 |
| 121 122 | 505 506 | .988281 |
| 123 | 507 | .990234 |
| 124 | 508 | .992188 |
| 125 | 509 | .994141 |
| 126 | 510 511 | .996094 |

511

DAC OUTPUT

The output of the digital filter drives an internal 7 bit pulse width modulation (PWM) digital to analog converter. The design of the PWM DAC is such that all noise components are at or above 10KHz. The output is low pass filtered to 5KHz, and externally amplified.

ELECTRICAL CHARACTERISTICS

| Maximum Ratings* | |
|------------------|-----------------|
| Vcc | -0.3V to $+12V$ |

 Storage Temperature
 -25° to +125°C

 Lead Temp (Soldering)
 10Sec @ +330°C

Standard Conditions (unless otherwise stated)

Vcc = +4.6V to +6.5V

Operating Temperature = 0°C to +55°C

*Exceeding these ratings could cause permanent damage to the device. This is a stress rating only and functional operation of this device at these conditions is not implied — operating ranges are specified in Standard Conditions. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Data labeled "typical" is presented for design guidance only and is not guaranteed.

DC CHARACTERISTICS

| Characteristic | Min | Тур | Max | Units | Conditions |
|---|------|-----|-----|-------|----------------------|
| 10 Inputs: | | | | | |
| Reset D0-D7, Data Present | | | | | |
| Logic 0 | 0.0 | - | 0.6 | V | |
| Logic 1 | 2.4 | _ | Vcc | V | |
| Leakage | – | _ | 10 | μA | 5.5V |
| 1 Clock Input: | | | | | |
| Logic 0 | 0.0 | _ | 0.6 | V | |
| Logic 1 | 4.0 | - | Vcc | V | |
| Leakage | _ | _ | 10 | μΑ | 5.5V |
| 2 Test Inputs | | | | | |
| Direct Data Mode, ROM Test | | l | | | |
| Logic 0 | 0.0 | _ | 0.6 | V | |
| Logic 1 | 2.4 | _ | Vcc | v | |
| Capacitance | | _ | 10 | pF | |
| Leakage | _ | - | 10 | μA | 5.5V |
| 3 P/P Outputs | | | | | |
| Data Request, CPU Clock, 445.7kHz Clock | | | | | |
| Logic 0 | 0.0 | _ | 0.6 | l v | .72mA |
| Logic 1 | 3.50 | _ | Vcc | V | -50μA |
| 1 O/C Output | | | | | |
| Digital Out | | | | | |
| Logic 0 | 0.0 | _ | 0.6 | V | 2.2K |
| Logic 1 | _ | _ | 10 | μА | 5.0V Source |
| Power on $V_{DD} = I_{CC}$ | _ | 50 | 75 | mA@ | |
| | | | | 25°C | V _{DD} =5.5 |
| | | | | | V _{SS} =0.0 |
| | | | | | No Loads |

AC CHARACTERISTICS

| Characteristic | Min | Тур | Max | Units | Conditions |
|--------------------------------|------|--------------------------------------|-------------|-------|------------|
| Clock Frequency | _ | 3.12 | _ | MHz | Square |
| Clock Period | - | 320 | l – | ns | Wave |
| Data Present | İ | | | | |
| Logic 1 | 1.5 | l – | _ | μs | |
| Logic Q | 10.0 | - | - | με | |
| Reset D0-D7 | 1000 | - | i – | μs | |
| Set Up | 1.5 | _ | _ | μs | |
| Hold | 1.5 | _ | _ | μs | |
| P/P Test Output Serial Data | | | | | |
| Logic 0 | 0.0 | - | 0.6 | V | |
| Logic 1 | 3.50 | | Vcc | ٧ | No Load |
| | | | омα 🗧 | ко | |
| | , | 20p1 <u>±</u> 3 12M112 <u>±</u> 20p1 | | | |
| | | CHIP WILL (WITH PASSI SHOWN F | VE COMPONEN | TS | |

SPEECH CODE GENERATION

The analog speech signal from a tape recording is applied to a .1-5KHz bandpass filter and sampled at a 10KHz rate. Each sample is converted to a 12 bit digital value. A pitch period estimation and voicing decision is made to obtain the pitch, amplitude, and repeat coefficients. An LPC analysis is then performed on the digital data which produces the digital filter coefficients to best match the spectral characteristics of the samples in a particular speech frame. During this analysis, the number of filter stages and the coefficients precision (low, high, full) information is entered. The coefficients generated by the analysis are then translated into a form which is compatible with the SP0250. If desired, the data may be further compressed by delta coding the coefficients.

APPLICATION:


The SP0250 is easily interfaced to most microcomputers or microprocessor systems. The microcomputer must decide what word or phrase to speak, retrieve speech data, expand data if it was compressed, and transfer the data to the speech chip.

DESCRIPTION:

The VSM2032 speech module includes the SP0250 speech synthesizer, a PIC1650A microcomputer and standard 32K ROM. The module interface consists of seven input lines (S0-S6), a STROBE line, a RESET line and a BUSY line.

OPERATION:

The word or phrase to be spoken is selected by placing its address on lines S0 through S6. The address is clocked into the module by a pulse on the STROBE line. At this time, the module will drive the BUSY line low and start speaking the selected word. When the module has finished speaking it will drive the BUSY line high and wait for new input on S0-S6.

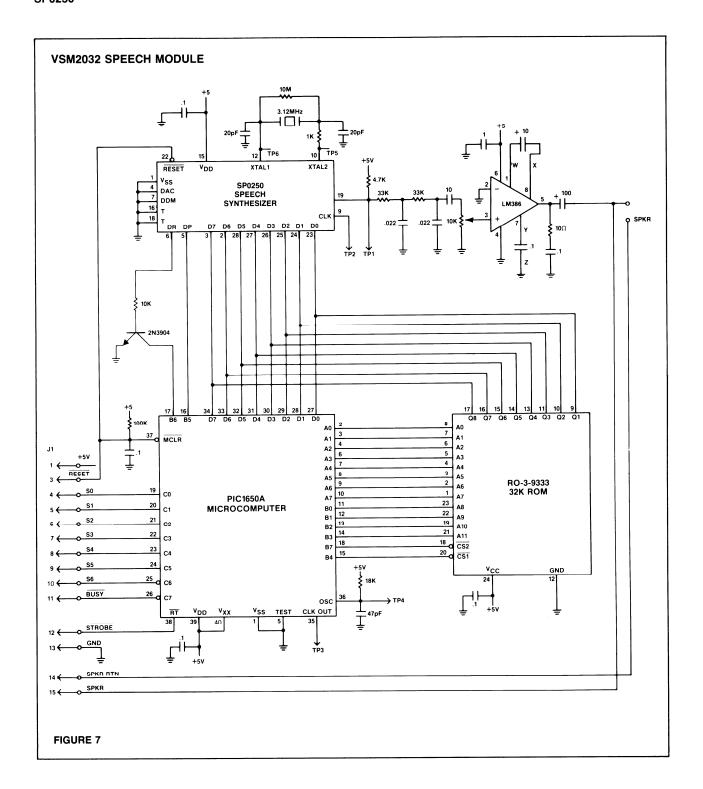

PIC MICROCOMPUTER FUNCTIONS

The functions of the PIC microcomputer in the VSM2032 module include the following:

- Input word address
- Retrieve compressed speech data from ROM
- Expand speech data to 15 x 8 bit frame
- Output speech frame to SP0250

Of these four tasks, expanding the speech data is the only one which needs further explanation. The speech data frames are usually stored in a compressed format to yield more speech per ROM. There are three techniques used to compress the data:

REDUCE STAGES:

Often it is unnecessary to implement all six filter stages for adequate speech modeling. In general, voiced speech requires four to six stages while unvoiced speech can be modeled with two to four stages. The unused stages have coefficients of zero.

REDUCE PRECISION:

Storing full 8 bits of precision for all 15 coefficients is unnecessary. It is possible to assign a different bit precision to each of the coefficients.

DELTA CODING:

This technique exploits the relatively smooth and continuous characteristic of the coefficients. The smaller differential between parameters in adjacent frames is stored rather than the absolute magnitude.


NOTE: Roducing the number of filter stages and reducing the coefficient precision may affect the speech quality. Delta coding does not.

The speech data may be encoded using any, all or none of these techniques. However, there is a tradeoff between data compression and software complexity of the controlling microcomputer (e.g. PIC1650A) — highly compressed speech data will yield more speech per ROM, but will necessitate complex decoding routines in the controlling microcomputer.


The standard PIC1650A in the VSM2032 module was programmed to handle highly compressed speech data and, therefore, may be overly complex for inclusion in an already burdened microcomputer. The following pages illustrate the use of a simple algorithm to drive the SP0250.

EXAMPLE

The driver routine shown in Figure 10 will retrieve data of the format shown in Figure 8.

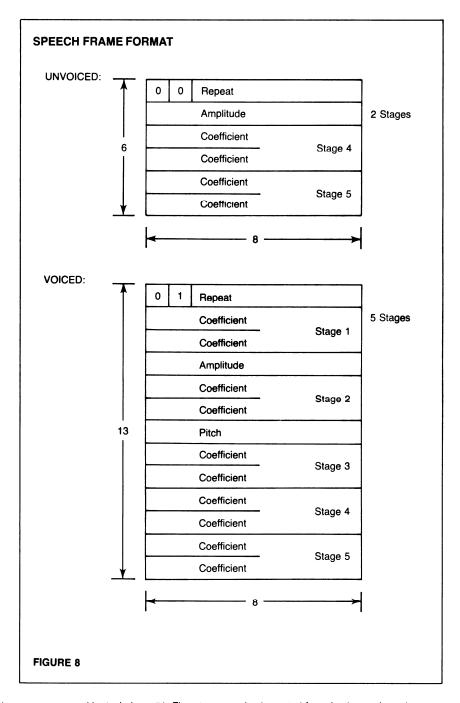

The speech data was compressed by technique #1. Five stages are implemented for voiced speech, and two stages for unvoiced speech. The driver routine is easy to implement, yet the ROM stores 30% more speech data than the non-compressed 15 x 8 bit format.

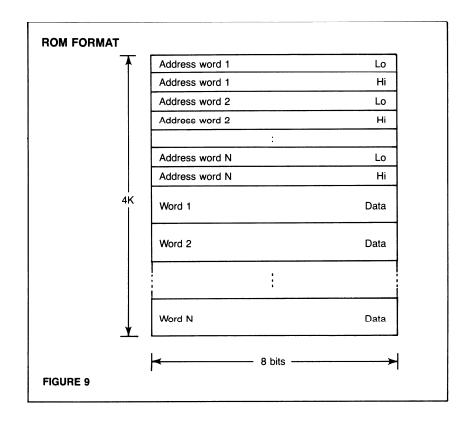


The ROM is divided into two sections — the jump table and the speech data. Each jump table entry points to the starting address of a particular segment of speech data. If there are ten words stored in ROM, then there will be ten two byte entries in the jump table. The speech data for each word will consist of compressed speech frames.

The 32K ROM with data compressed by technique #1 can store approximately 7-10 seconds of speech. If additional compression techniques were performed on the data, the ROM could store up to 30 seconds of speech.

SPEECH DATA

Listed below are the speech data for the word "EAT". The first line is the jump table entry which indicates that the speech data starts at octal address 24. The last line marks the end of the speech data block. The remaining lines are the speech data frames — 13 bytes for voiced frames, 6 bytes for unvoiced frames.

```
TEMP
       T=00004 IS ON CR A1
                              USING 00024 BLKS R=0000
0001
      $000000,024,000,L,
      5000024,
0002
0003
      003,065,066,042,034,013,
      103,106,040,331,104,064,112,114,020,136,222,141,350,
0004
0005
      101,130,040,360,116,054,116,126,020,152,220,127,340,
0006
      102,114,040,336,072,044,121,116,020,164,220,144,351,
      102,076,034,327,072,060,123,046,010,126,220,153,355,
0007
0008
      102,020,024,334,106,044,125,066,014,156,216,134,343,
      102,102,034,361,064,044,126,066,014,150,216,131,341,
0009
0010
      101,130,040,332,032,040,130,100,020,152,216,137,346,
0011
      102,112,040,323,036,040,133,066,020,152,216,147,354,
0012
      102,116,040,324,044,050,135,050,014,140,214,140,350,
0013
      101,132,040,270,072,074,140,056,014,140,214,161,362,
0014
      102,144,044,260,060,070,142,100,010,132,216,142,354,
0015
      101,140,044,226,106,100,144,104,010,154,216,163,363,
0016
      003,064,062,204,210,201,
0017
      003,027,014,020,027,210,
0018
      003,011,042,020,230,214,
0019
      003,007,026,016,214,003,
      003,000,032,014,220,202,
0020
      003,000,020,012,205,010,
0021
0022
      003,000,036,010,221,014,
0023
      003,000,026,040,033,213,
0024
      003,072,056,050,050,220,
0025
      003,075,120,102,025,005,
0026
      003,123,076,102,031,016,
0027
      003,163,060,064,033,013,
0028
      003,164,076,076,032,202,
0029
      003,161,126,102,103,204,
0030
      003,135,104,074,041,212,
0031
      003,074,100,070,070,224,
      003,061,076,056,112,231,
0032
      003,026,052,054,115,234,
0033
0034
      003,016,040,046,063,232,
0035
      003,000,000,000,000,000,
0036
      000,L
```

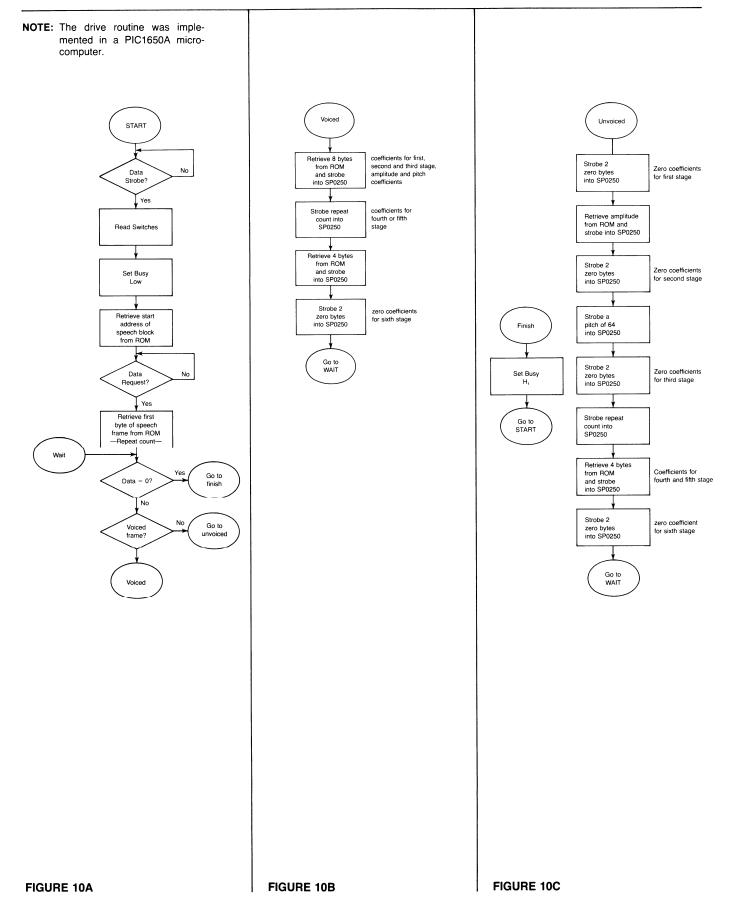

LISTING

```
PAGE
                                                                                            1
LINE
        ADDR
               B 1
                      B 2
   1
   2
                             ; •
                                                  SP 0250 CONTROLLER
   3
                             ; *
                                             *******
                                     LIST P=1650
                                     ORG
   7
   8
   9
  10
                             : REGISTER EQUATES
  11
  12
      000001
                             RTCC
                                                             :RTCC REGISTER
                                     EQU
                                             1
  13
                                                             :PROGRAM COUNTER
  14
      000002
                             PС
                                     EQU
                                             2
                                                             STATUS WORD REGISTER
      000003
                             SWR
                                     EQU
                                             3
  15
                                                             FILE SELECT REGISTER
  16
      000004
                             FSR
                                     EQU
                                             4
      000005
                                             5
                                                             : ADDRESS LINES TO ROM
                                     EQU
                             IOA
  17
                                                             ; ADDRESS/CHIP FNABLE/HANDSHAKING
      900000
                             IOB
                                     Εωυ
                                             6
  18
                                                             :SWITCH INPUT/BUSY LINE
      000007
                             SWITCH
                                     EQU
                                             7
  19
                                                            :ROM/SP 0250 INTERFACE
                                             10
      000010
                             DATA
                                     EQU
  20
                             LOADD
                                     ΕQU
                                             11
                                                            :ROM ADDRESS-LO
      000011
  21
                                             12
                                                             ; ROM ADDRESS-HI
  22
      000012
                             HIADD
                                     EQU
                                             13
                                                             :REPEAT BYTE -VOICE/UNVOICED
                                     ΕQU
  23
      000013
                             REPEAT
                                                             ; COEFFICIENT COUNT
  24
                                             14
      000014
                             CCOUNT
                                     EQU
                                             15
                                                             :TEMP STORE
      000015
                             TEMP
                                     EQU
  25
  26
  27
  28
                             : BIT FQUATES
  29
                             :
  30
                                                             : CARRY BIT-SWR
      000000
                                     EQU
  31
                             C
                                             0
                                                             :ZERO BIT -SWR
      000002
                             Z
                                     EQU
                                             2
  32
                                                             ;DATA PRESENT - IOB
      000005
                             DATAP
                                     EQU
                                             5
  33
                                                             :DATA REQUEST - IOB
      000006
                             DATAQ
                                     EQU
  34
                                             6
                                                             : VOICED/UNVOICED -REPEAT
  35
      000006
                             VOICE
                                     EQU
  36
  37
                             : SUBROUTINES
  38
  39
  40
      000000 00150
                             ZEROCO
                                     CLRF
                                             DATA
                                                             :ZERO COEFFICIENT
  41
       000001 02646
                                             IOB DATAP
                             STROBE
                                      BSF
  42
      000002 02246
                                             108 DATAP
                                                             :STROBE SPUZSO -NEG. EDGE
                                     BCF
  43
      000003 04000
  44
                                      RETLW 0
  45
                             :INCADD -INCREMENT ROM ADDRESS
  46
  47
                                                             ; NEXT SEQUENTIAL LOCATION
                                             LOADD
      000004 01251
  48
                             INCADD
                                     INCF
                                      BTFSC SWR,Z
      000005 03103
  49
                                             HIADD
                                                            :LOW ORDER ROLL -OVER
      000006 01252
                                      INCF
  50
  51
       000007 04000
                                      RETLW 0
  52
                             :DISABL -DISABLE ROM
  53
  54
```

```
ADDR
LINE
                B 1
                      82
                                                                                   PAGE
                                                                                            2
      000010 06320
                             DISABL
                                    MOVLW
                                            320
  55
      000011 00046
                                     MOVWF
                                            108
                                                            ;DISABLE ROM
      000012 04000
  57
                                     RETLW O
  58
  59
                                     -RESTORE DATA BUS
  60
                             :RESTOR
  61
      000013 06377
                                             377
  62
                             RESTOR
                                     MOVLW
                                            DATA
      000014 00050
                                                             :RESTORE FOR SP 0250/ROM COMM.
  63
                                     MOVWF
  64
      000015 04000
                                     RETLW 0
  65
                             ; READ
                                    -READ ROM/ADRESSED BY LO/HIADD
  67
      000016 01011
                             READ
                                     MOVFW
                                             LOADD
  68
      000017 00045
                                     MOVWE
                                             IOA
                                                             :PUT OUT LO
                                             HIADD
      000020 01012
                                     MOVFW
  69
      000021 07017
                                     ANDLW
                                             17
                                                            CONLY 4 BITS VALID
      000022 06720
                                             3 2 U
                                     IORLW
                                                             :KEEP ROM DISABLED
  71
  72
      000023 00046
                                     MOVWF
                                             108
                                                             :PUT OUT HI
      000024 07157
                                             157
  73
                                     ANDLW
      000025 00046
                                             IOB
  74
                                     MOVWF
                                                             ; ENABLE ROM
  75
      000026 04000
                                     RETLW
                                                             :DATA PRESENT ON IOD
                                             0
  76
  77
                             :MAIN PROGRAM
  78
                                             RTCC
  79
      000027 00141
                             START
                                     CLRF
                                                             :INITALIZE FOR STROBE INPUT
      000030 01001
                                             RTCC
  80
                             WAIT
                                     MOVFW
                                             SWR . Z
      000031 03103
                                     BTFSC
  A 1
                                             WAIT
      000032 05030
                                     GOTO
                                                             ; NO STROBETT
                                             SWITCH
      000033 01007
                                     MOVFW
                                                             ;DATA STRBOBET
  83
                                             177
  84
      000034 07177
                                     ANDLW
                                                             :LOW 7 BITS VALID
      000035 00051
                                             LOADD
  85
                                     MOVWF
                                                             :STORE SWITCH INPUT
                                                             :SWITCH INPUT 7 BITS
      000036 00152
                                             HIADD
  86
                                     CLRF
      000037 02003
                                             SWR,C
  87
                                     BCF
                                             LOADD
  88
      000040 01551
                                     RLF
                                                             :JUMP TABLE -2 BYTE ADDRESS
      000041 06177
  89
                                             177
                                     MOVLW
      000042 00047
                                     MOVWF
                                             SWITCH
                                                             :BUSY LOW -CHIP "TALKING"
  90
      000043 04416
                                             READ
  91
                                     CALL
                                                             :READ ROM -JUMP TABLE
      000044 01010
                                     MOVFW
                                             DATA
                                                             GET DATA
  92
  93
      000045 00055
                                     MOVWE
                                             TEMP
                                                             ISTORE LO ADDRESS
  94
      000046 04404
                                             INCADD
                                                             ; NEXT ROM LOCATION
                                     CALL
  95
      000047 04410
                                             DISABL
                                     CALL
                                                             :DISABLE ROM
      000050 04416
                                             READ
  96
                                     CALL
                                                             : READ ROM - JUMP TABLE
      000051 01010
                                             DATA
  97
                                     MOVEW
                                             HIADD
  98
      000052 00052
                                     MOVWF
                                                             :HI ADDRESS FROM JUMP TABLE
                                            TEMP
  99
      000053 01015
                                     MOVFW
      000054 00051
                                            LOADD
 100
                                     MOVWF
                                                             ; LO ADDRESS FROM JUMP TABLE
 101
 102
                             IGET FRAMES OF DATA FROM ROM
                             AND SEND TO SP 0250
 103
 104
 105
     000055 03306
                             READY
                                     BTFSC IOB DATAQ
                                                             :LINE INVERTEDED
     000056 05055
                                             READY
 106
                                     GOTO
                                                             :SP 0250 NOT READY
      000057 04410
                             FRAME
                                     CALL
                                             DISABL
                                                             :DISABL ROM
 107
      000060 04416
                                             READ
                                                             :GET VOICE SELFCT/REPEAT
 108
                                     CALL
```

```
LINE
        ADDR
               B 1
                      B 2
                                                                                   PAGE
                                                                                            3
     000061 01010
 109
                                   MOVEW DATA
 110
     000062 03103
                                   BTFSC SWR , Z
      000063 05143
 111
                                   GOŤO
                                           FINISH
                                                           :ZERO BYTE -END "WORD"
112
      000064 00053
                                          REPEAT
                                   MOVWF
                                                           STORE VOICE SELECT/REPEAT
113
      000065 03713
                                   BTFSS
                                          REPEAT, VOICE
      000066 05117
114
                                           UNVOIC
                                   GOTO
                                                           :UNVOICED FRAME
115
      000067 06010
                                   MOVLW
                                          10
116
      000070 00054
                           SHALE
                                   MOVWE
                                          CCOUNT
                                                           :LOAD COEFFICIENT COUNT
      000071 04404
117
                                          INCADD
                           GETDAT
                                   CALL
                                                           : NEXT-LOCATION IN ROM
118
      000072 04410
                                   CALL
                                           DISABL
                                                           :DISABLE ROM
      000073 04416
 119
                                          READ
                                   CALL
                                                           :GET COEFFICIENT
     000074 04401
 120
                                           STRUBE
                                   CALL
                                                           :STROBE DATA INTO SP U250
      000075 01354
 121
                                   DECFSZ CCOUNT
 122
     000076 05071
                                           GETDAT
                                   GOTO
                                                           :MORE COEFFICIENTS
     000077 03353
 123
                                   BTFSC
                                          REPEAT.7
      000100 05111
 124
                                           7ER06
                                   GOTO
                                                           :SECOND TIME THROUGH
 125
      000101 04410
                                           DISABL
                                   CALL
      000102 01013
126
                                   MOVFW
                                          REPEAT
 127
      000103 00050
                                          DATA
                                   MOVWF
                                                           :OUTPUT VOICE SELECT/REPEAT
 128
      000104 04401
                                                           STROBE SP 0256
                                           STROBE
                                   CALL
 129
      000105 04413
                                           RESTOR
                                                           :RESTORE SP 0250/ROM BUS
                                   CALL
 130
      000106 02753
                                           REPEAT,7
                           REST
                                   BSF
                                                           :SET FLAG
      000107 06004
 131
                                   MOVIW
                                                           :GET STAGES 4 & 5
     000110 05070
 132
                                           SHALF
                                   GOTO
 133
      000111 04410
                                          DISABL
                           ZER06
                                   CALL
                                                           :DISABLE ROM
134
      000112 04400
                                          7EROCO
                                                           :ZERO COEFFICIENT FOR
                                   CALL
      000113 04400
135
                                           zEROCO
                                   CALL
                                                           SIXTH STAGE
      000114 04413
 136
                                          RESTOR
                                   CALL
                                                           :SET IOD FOR INPUT
      000115 04404
137
                                   CALL
                                           INCADD
     000116 05055
138
                                           READY
                                   GOTO
                                                           GET NEXT SPEECH FRAME
 139
 140
                           :UNVOICED
 141
      000117 04410
 142
                                          DISABL
                           UNVOIC
                                   CALL
                                                           :DISABLE ROM
     000120 04400
 143
                                           ZEROCO
                                                           :ZERO COEFFICIENT FOR
                                   CALL
     000121 04400
 144
                                           ZEROCO
                                                           :FIRST STAGE
                                   CALL
 145
      000122 04413
                                           RESTOR
                                                           ; RESTORE SP 0250/ROM BUS
                                   CALL
      000123 04404
 146
                                           INCADD
                                                           : NEXT ROM LOCATION
                                   CALL
 147
      000124 04416
                                   CALL
                                           READ
                                                           GET AMPLITUDE
 148
      000125 04401
                                           STROBE
                                                           :STROBE DATA INTO SP 0250
                                   CALL
      000126 04410
 149
                                   CALL
                                           DISABL
                                                           :DISABLE ROM
 150
     000127 04400
                                   CALL
                                           ZEROCO
                                                           :ZERO COEFFICIENT FOR
      000130 04400
 151
                                           ZEROCO
                                                           :SECOND STAGE
                                   CALL
      000131 06100
 152
                                           .64
                                   MOVLW
                                           DATA
 153
      000132 00050
                                                           ;PITCH PERIOD -> 64
                                   MOVWF
      000133 04401
 154
                                           STROBE
                                                           :STROBE INTO SP 0250
                                   CALL
 155
      000134 04400
                                           ZEROCO
                                                           :ZERO COEFFICIENT FOR
                                   CALL
     000135 04400
 156
                                           ZEROCO
                                                           ;THIRD STAGE
                                   CALL
      000136 01013
 157
                                          REPEAT
                                   MOVFW
     000137 00050
 158
                                           DATA
                                                           : VOICE SELECT/REPEAT
                                   MOVWF
 159
      000140 04401
                                           STROBE
                                   CALL
                                                           :STROBE INTO SP 0250
      000141 04413
 160
                                           RESTOR
                                                           :RESTORE SP 0250/ROM BUS
                                   CALL
      000142 05106
 161
                                   GOTO
                                           REST
                                                           :GET COEFFIENTS FOR 4 & 5 STAGE
 162
```

```
LINE
        ADDR
               81
                     B 2
                                                                               PAGE
 163
                             FINISH -ONE WORD OR PHRASE HAS
                                       BEEN SPOKEN
 164
 165
                             ;
 166
      000143 06377
                             FINISH MOVLW 377
      000144 00047
                                            SWITCH
                                                            :BUSY HI -CHIP "NOT TALKING"
 167
                                     MOVWF
     000145 04413
                                            RESTOR
 168
                                     CALL
                                                            RESTOR IOD FOR INPUT
 169
                                            START
      000146 05027
                                     GOTO
 170
                                     ORG
                                             777
      000777 05027
                                     GOTO
                                            START
 171
 172
     001000
                                     END
 ASSEMBLER ERRORS .
                        0
```

NOTE: On reset all I/O pins are set high and program execution begins at address 7778.





NORTH AMERICA UNITED STATES:

MICROELECTRONICS DIVISION

NORTHEAST—600 West John Street Hicksville, New York 11802 Tel: 516-733-3107, TWX: 510-221-1866

20th Century Plaza Daniel Webster Highway Merrimack, New Hampshire 03054 Tel: 603-424 3303, TWX: 710-366-0676

858 Welsh Road Maple Glen, Pennsylvania 19002 Tel: 215-643-5326

SOUTHEAST-7901 4th Street, N., Suite 208 St. Petersburg, Florida 33702 Tel: 813-577-4024, TWX: 810-863-0398

1616 Forest Drive Annapolis, Maryland 21403 Tel: 301-269-6250, TWX: 710-867-8566 4921C Professional Court Raleigh, North Carolina 27609 Tel: 919-876-7380

SOUTH CENTRAL-5520 LBJ Frwy., Suite 330 Dallas, Texas 75240 Tel: 214-934-1654, TWX: 910-860-9259

CENTRAL-4524 S. Michigan Street South Bend, Indiana 46614 Tel: 219-291-0585, TWX: 810-299-2518 5820 West 85th Street, Suite 102 Indianapolis, Indiana 46278 Tel: 317-872-7740, TWX: 810-341-3145 2355 S. Arlington Hts. Road, Suite 408 Arlington Heights, Illinois 60005 Tel: 312-981-0040, TWX: 910-687-0254

32969 Hamilton Court, Suite 210 Farmington Hills, Michigan 48018 Tel: 313-391-4070

SOUTHWEST-201 Standard Street El Segundo, California 90245 Tel: 213-322-7745, TWX: 910-348-6296

NORTHWEST-3080 Olcott Street, Suite 230C Santa Clara, California 95051 Tel: 408-496-0844, TWX: 910-379-0010

EUROPE

EUROPEAN SALES HEADQUARTERS:

GENERAL INSTRUMENT MICROELECTRONICS LTD. Regency House, 1-4 Warwick Street, London W1R 5WB Tel: 01-439-1895, Telex: 23272

NORTHERN EUROPEAN SALES OFFICE:

Regency House, 1-4 Warwick Street, London W1R 5WB Tel: 01-439-1891, Telex: 23272

Sandhamnsgatan 67 S-115 28, Stockholm Tel: 08-67 99 25, Telex: 17779

CENTRAL EUROPEAN SALES OFFICE: GENERAL INSTRUMENT DEUTSCHLAND GmbH

(MOS Produktgruppe) Nordendstrasse 3, 8000 Munchen 40 Tel: (089)27 24 049, Telex: 528054 6070 Langen Bei Frankfurt A Main Wilhelm-Leuschner Platz 8, Postf. 1167 Tel: (6103) 23 051, Telex: 415000

SOUTHERN EUROPEAN SALES OFFICE:

5-7 Rue De L'Amiral Courbet 94160 Sainte Mande, Paris Tel: 365 72 50, Telex: 213073 Piazza Novelli, 8

20129 Milano Tel: 720914, Telex: 843-320348

ASIA

HONG KONG:

GENERAL INSTRUMENT HONG KONG LTD. 139 Connaught Road Central, 3/F, San-Toi Building Tel: (5) 434360, Telex: 84606

JAPAN:

GENERAL INSTRUMENT INTERNATIONAL CORP. Fukide Bldg. 8th Floor, 1-13 Toranomon 4-Chome Minato-ku, Tokyo 105 Tel: (03) 437-0281, Telex: 2423413

TAIWAN:

GENERAL INSTRUMENT MICROELECTRONICS TAIWAN 77 Pao Chiao Road, Hsin Tien

Taipei, Taiwan Tel: (02) 914-6234, Telex: 785-3111

MANUFACTURING FACILITIES

U.S.A.—Hicksville, New York ● Chandler, Arizona ● EUROPE—Glenrothes, Scotland ● ASIA—Kaohsiung, Taiwan

APPLICATIONS CENTERS

U.S.A.—Hicksville, New York • Chandler, Arizona • Los Angeles, California EUROPE-Glenrothes, Scotland • London, England • Paris, France • Munich, Germany ASIA—Kaohsiung, Taiwan • Tokyo, Japan • Hong Kong